
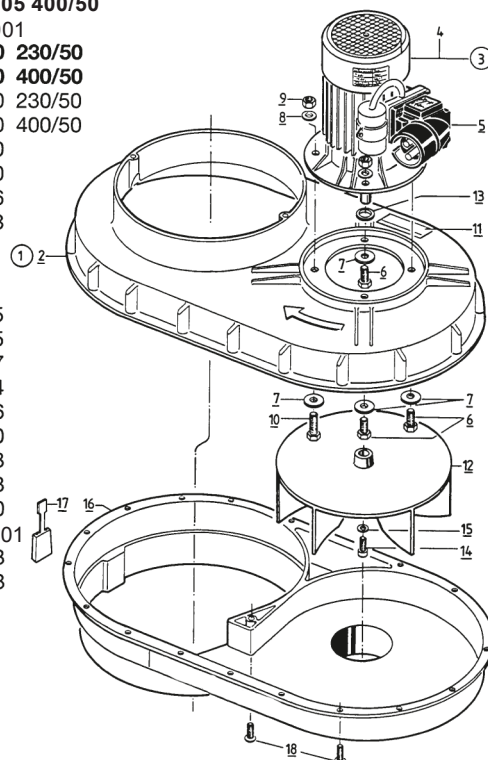



- 2 = 1906300003
- 3 = 7503 2002
- 4 = 0209 1262
- 5 = 0267 9810
- 6 = 0215 8705
- 7 = 7503 2003
- 8 = 0500 3464
- 9 = 7503 2008
- 10 = 4025 5008
- 12 = 1906300004
- 13 = 0209 3363
- 14 = 0267 9808
- 15 = 0209 3405
- 16 = 1906300008

- 1 = 1906300006 230/50
- 1 = 1906300005 400/50
- 2 = 1906300001
- 3 = 7501 7000 230/50
- 3 = 7502 7000 400/50
- 4 = 7501 7100 230/50
- 4 = 7502 7100 400/50
- 5 = 7501 2300
- 5 = 7502 3300
- 6 = 0209 3366
- 7 = 0290 2108

- 8 = 0214 4005
- 9 = 0209 3405
- 10 = 0209 3367
- 11 = 7503 1004
- 12 = 7503 1006
- 13 = 0109 8820
- 14 = 0500 7803
- 15 = 0273 4903
- 16 = 7503 1200
- 16 = 1906300001
- 17 = 7503 1003
- 18 = 0500 8403

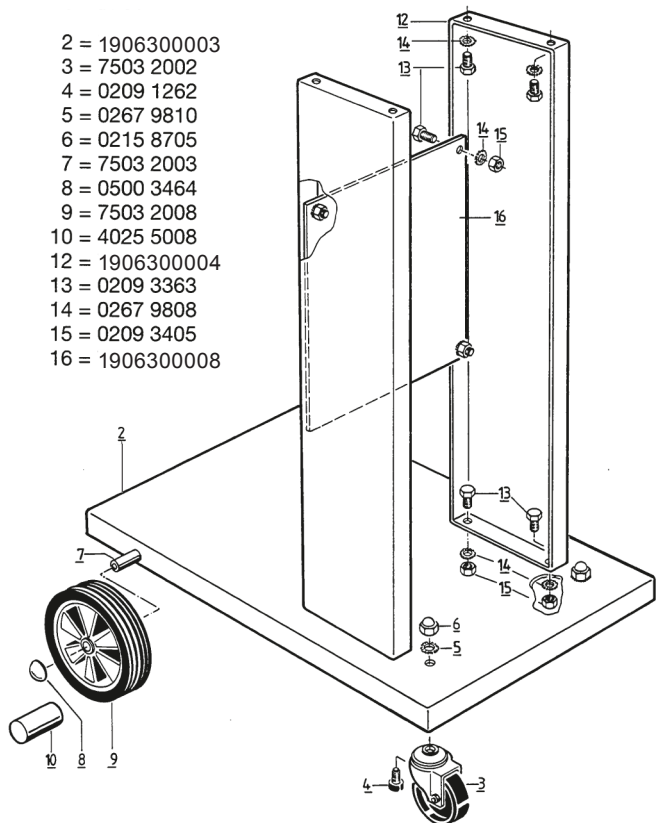

2 - 18	4 + 5
①	③

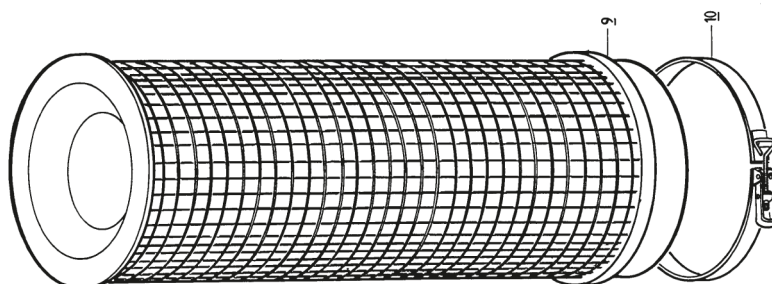

10 = 7500 6002

- 1 = 7503 2007
- 2 = 7500 1019
- 3 = 7500 6002
- 4 = 7510 1004
- 5 = 7500 1021
- 6 = 7500 1017
- 7 = 7500 1023
- 8 = 7500 1415
- 9 = 7500 6001

