


Biostar 3000

scheppach

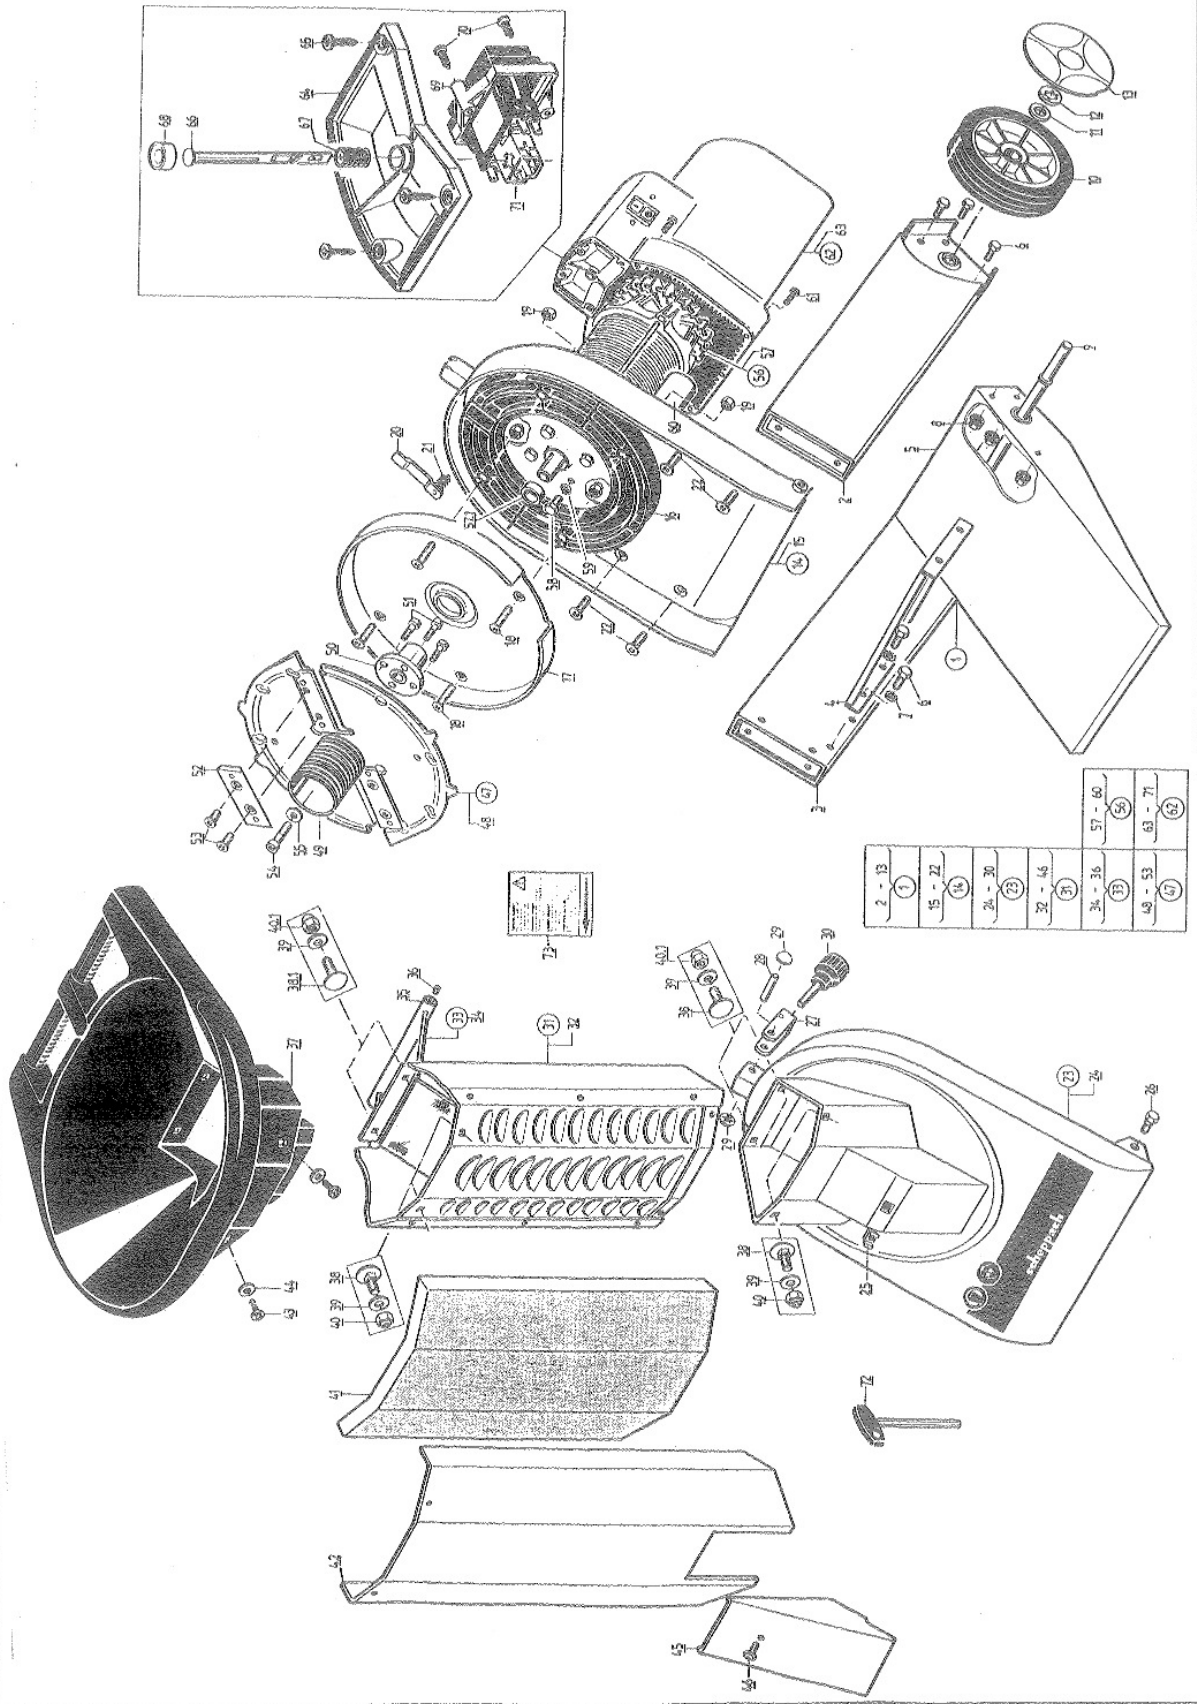

1 = 4051 0001	23 = 4051 0056
2 = 4051 0002	25 = 0500 7001
3 = 4051 0007	26 = 5300 3025
4 = 4051 0010	27 = 4051 0049
5 = 4051 0011	28 = 4051 0052
6 = 0209 3345	29 = 0500 3461
7 = 0267 9806	30 = 0510 6100
8 = 0209 3404	31 = 4051 0060
9 = 4051 0012	32 = 4051 0061
10 = 4051 0014	33 = 4051 0067
11 = 0214 4007	37 = 4051 0072
12 = 0500 3422	38 = 0206 0313
13 = 4051 0015	38.1 = 0206 0314
14 = 4051 0020	39 = 0267 9806
15 = 4051 0021	40 = 0209 8504
16 = 4051 0029	40.1 = 0209 8606
17 = 4051 0030	41 = 4051 0065
18 = 0279 9127	42 = 4051 0036
19 = 0500 1202	43 = 0279 8123
20 = 4051 0025	44 = 0214 4003
21 = 4051 0095	45 = 4051 0066
22 = 0279 9133	46 = 0500 5312
22.1 = 0267 9843	47 = 4051 0086
	48 = 4051 0082
	49 = 4051 0087
	50 = 4051 2603
	51 = 0209 1238
	52 = 4040 0140 = 1 Satz
	53 = 0279 9122
	54 = 0279 1275
	55 = 0120 9306
	56 = 4051 0090 - 220/50
	4052 0090 - 400/50
	57 = 4051 0098 - 220/50
	4052 0098 - 400/50
	57.1 = 4051 0117
	57.2 = 0168 8534
	58 = 0500 5418
	58.1 = 4051 0054
	59 = 0267 9809
	60 = 4051 0099
	62 = 4051 0091 - 220/50
	4052 0091 - 400/50
	69 = 0504 7876
	70 = 0500 8403
	71 = 0504 7611 - 220/50
	0504 7612 - 400/50
	72 = 4010 2006
	73 = 4051 0114
	74 = 4051 0174